
RS232 Modifiers

RS232 Baud Rate

Baud Rate sends the data from the engine to the terminal at the specified rate. The host terminal must be set for the same baud rate as the engine.
Default = 9600.



232BAD0.

300



232BAD2.

1200



232BAD4.

4800



232BAD6.

19200



232BAD8.

57,600



232BAD1.

600



232BAD3.

2400



232BAD5.

* 9600



232BAD7.

38400



232BAD9.

115,200